


OrbiVib2

Datasheet

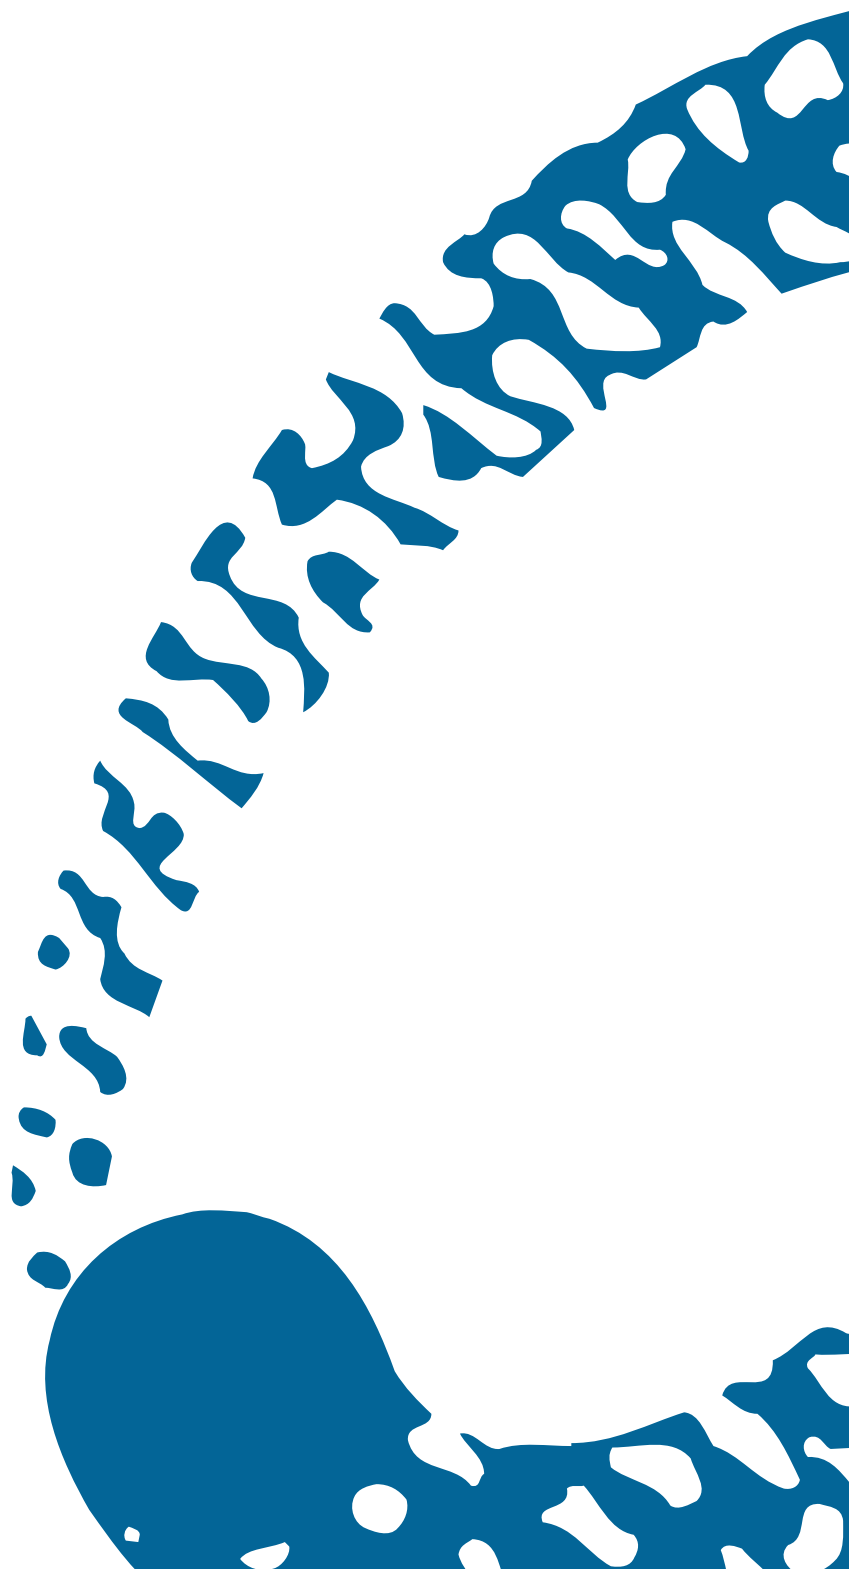

Key Features

- Profibus DP Interface
- USB Interface
- 8 independent configurable frequency bands
- External Dual axis Accelerometer
- 2 Digital Inputs with Encoder function
- 2 Relay Outputs
- Real Time Clock
- Internal non-volatile error buffer
- Internal non-volatile vibration trace data buffer
- DIN-rail snap-on mounting
- Programmable configuration
- Stand Alone security loop functionality



OrbiVib2

The OrbiVib2 is designed for vibration measurements in the frequency range 0.1–100 Hz. Up to 8 independent configurable frequency bands can be used to monitor and supervise accelerations in the frequency range of interest. The band-pass filter parameters, the vibration excess values and the reaction times can be configured individually for each frequency band.

The OrbiVib2 module provides 2 digital RPM inputs, which also can be used as an encoder input.

Two relay outputs are individually programmable for activation of RPM or/and vibration excess. An integrated 100 samples deep data/trace logger will capture all relevant information in case of an excess and will save it together with a time stamp in a non-volatile memory. Via the USB port these data can be exported and FFT evaluated by using third party programs like Matlab® or Octave®.

Either the Profibus DP or the USB interface can be used for configuration, monitoring and controlling of the OrbiVib2 system. In addition, a stand-alone operation after configuration is possible.

A GSD[E] file provides the master with all needed information about the module and the data protocol.

Specifications

Standards

Area	Standard	Title
	DS/EN 50081-2:1994	Electromagnetic compatibility - Generic emission standard - Part 2: Industrial environment
	DS/EN 50082-2:1994	Electromagnetic compatibility - Generic immunity standard - Part 2: Industrial environment


Technical

Area	Value	Variable
Power Supply	Supply Voltage	24 VDC (min. 19.0 – max. 30.0)
	Power Consumption	3 W (max.)
Relay output	Switching voltage	250 VAC / 30 VDC (max.)
	Switching current	0,01 AAC / ADC (min.) – 5/5 AAC / ADC (max.)
	Scan cycle	100 msec
Digital / Counter inputs	Input impedance	4400 Ohm
	Low input level	0 VDC (min.) – 8 VDC (max.)
	High input level	24 VDC (min. 16.0 – max. 40.0)
	Input frequency	1 Hz (min.) – 300 Hz (max.)
Profibus	Baud rate	9600 Baud (min.) – 12M Baud (max.)
Accelerometer	Cable length	10 m (max. 20)
	Acceleration range	+/- 14 m/s ²
	Frequency range	0,1 Hz (min.) – 100 Hz (max.)
	Filter bandwidth	0,1 Hz (min.) – 10 Hz (max.)


Environment

Area	Value	Variable
Storage and operation area	Operating temperature	-40... 50°C
	Storage temperature	-40... 85°C
	Humidity	0-95% RHD non condensing
	Environment module	IP20
	Environment sensor	IP65


Measurements

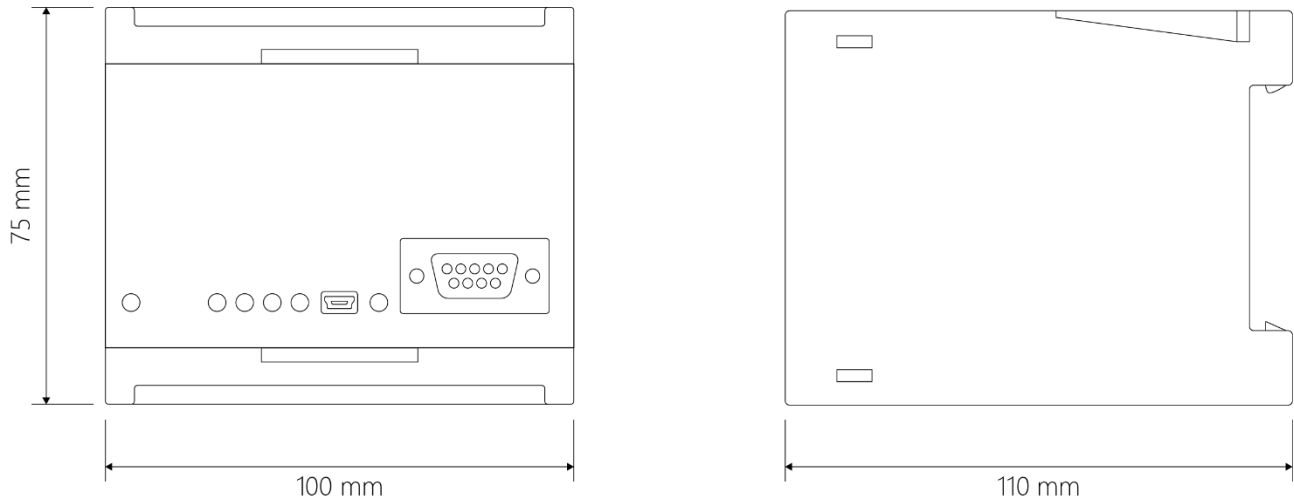

System block diagram

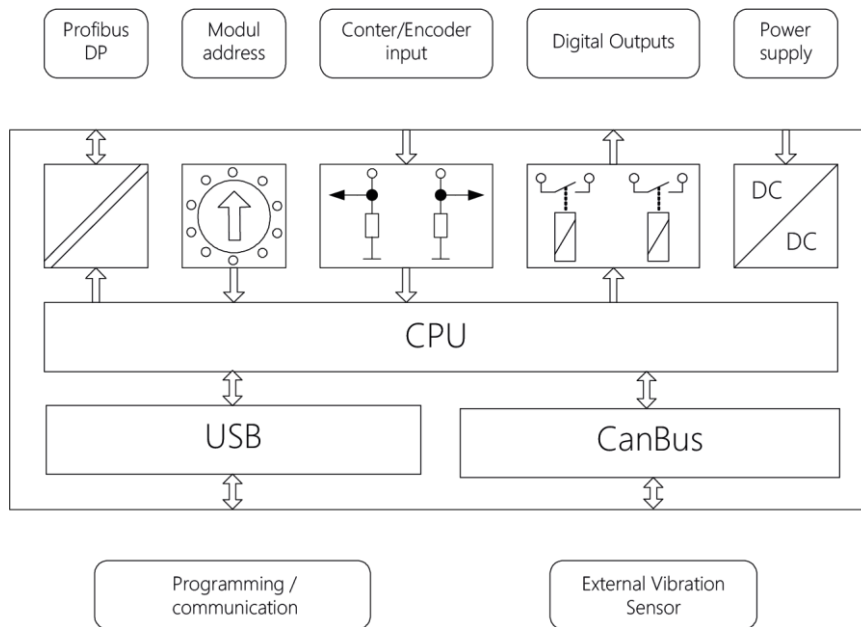

System I/O overview

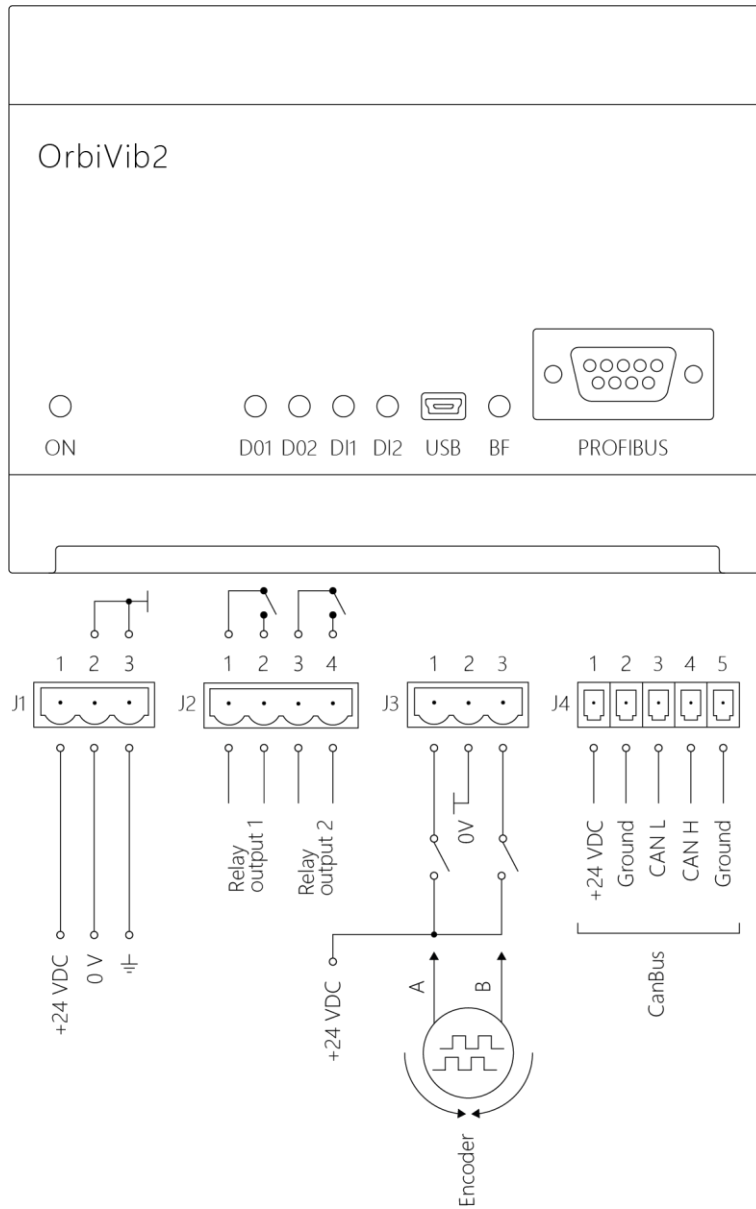

Connector assignment

Connector no.	Pin no.	Pin name	Description	Function
J1	1	+24V	Power	+24 VDC
	2	0	Power	GND
	3	E	Power	Earth
J2	1	D01	Relay output	Output 1
	2	D01		
	3	D02	Relay output	Output 2
	4	D02		
J3	1	DI1	Digital Input / RPM / Encoder A	Digital Input 1
	2	Gnd	Ground	Common ground
	3	DI2	Digital Input / RPM / Encoder B	Digital Input 2
J4	1	+24V	Power	Supply to Sensor
	2	Gnd	Ground	GND
	3	CAN L	Can Bus	Communication line
	4	Can H	Can Bus	Communication line
	5	Gnd	Ground	GND
J5	1	n.c.	Not connected	
	2	n.c.	Not connected	
	3	A	I/O	ProfiBus A
	4	RTS	Output	
	5	Gnd	Power	Ground
	6	+5Vdc	Power	*5V output (max. 20 mA)
	7	n.c.	Not connected	
	8	B	I/O	ProfiBus B
	9	n.c.	Not connected	

Changelog

Date	Revision	Author	Change
16/03-18	1.1	MKM	Layout update

Copyrights

This document does NOT include safety or installation instructions. Please see the relevant manuals for further details include safety instructions.

Please note that this document may be changed without prior notice. For newest revision, please contact your wind turbine distributor or contact Orbital A/S directly. Contact details can be found at orbital.dk or see last section in this document.

Copyright © 2018 Orbital A/S

All rights reserved.

All brand and product names used in this manual are trademarks or registered trademarks of the respective titleholders.

The information contained in this manual is the property of Orbital A/S. This manual and extracts thereof may only be duplicated or forwarded to third parties following explicit written approval by Orbital A/S.

We reserve the right to make changes and improvements to this manual as well as the hardware and software features at any time and without prior notification. All product names used in this manual are trademarks or otherwise protected by law, even if not specifically indicated.